

To Install Joint


Remove 2 screws holding handle to carriage and remove handle



For SK5xx/SK8xx handles, insert supplied screws from outside through 2 threaded holes as shown and install spacers



Position adapter as shown and screw both screws through adapter aligning holes and install acorn nuts.

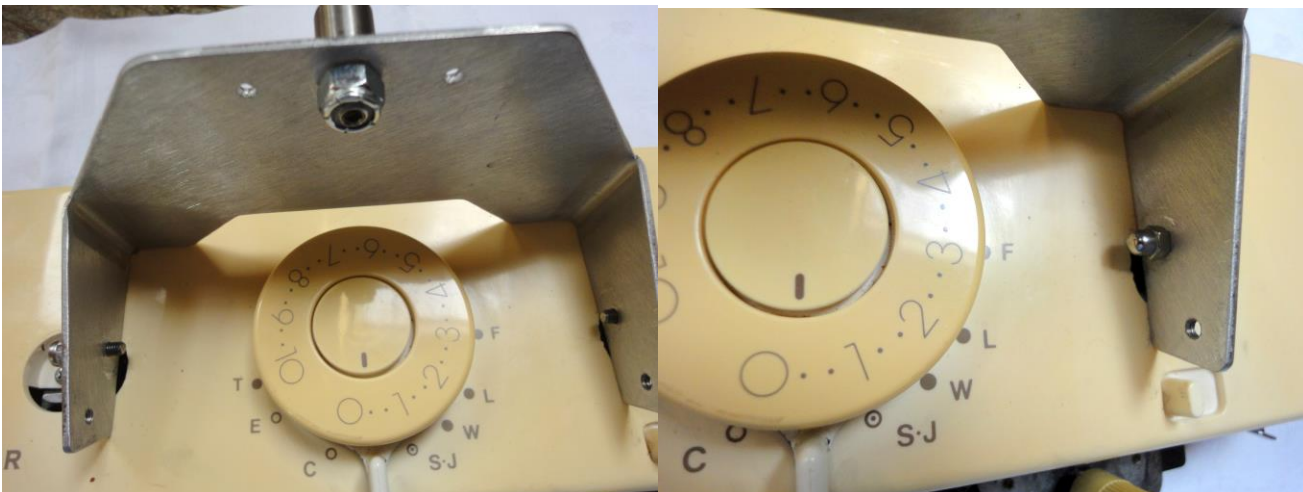

For SK360/SK7xx handles Position Joint as shown and install using 2 supplied screws and spacer as shown



Install Supplied handle with existing handle screws removed earlier. Do not overtighten screws.

